


HOW TO CHANGE THE G500 SERIES HEAD


STEP 1: Open the printer cover:




STEP 2: Open the head module:

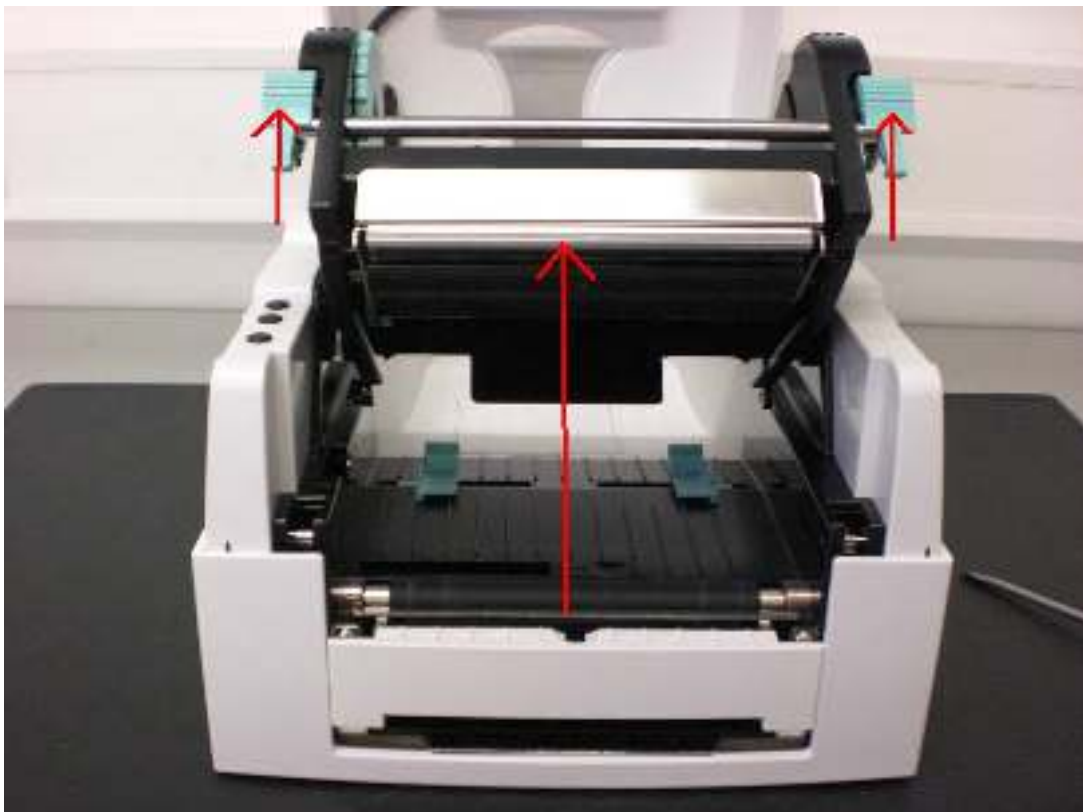

STEP 3: Remove the black screw from the top of the head module.

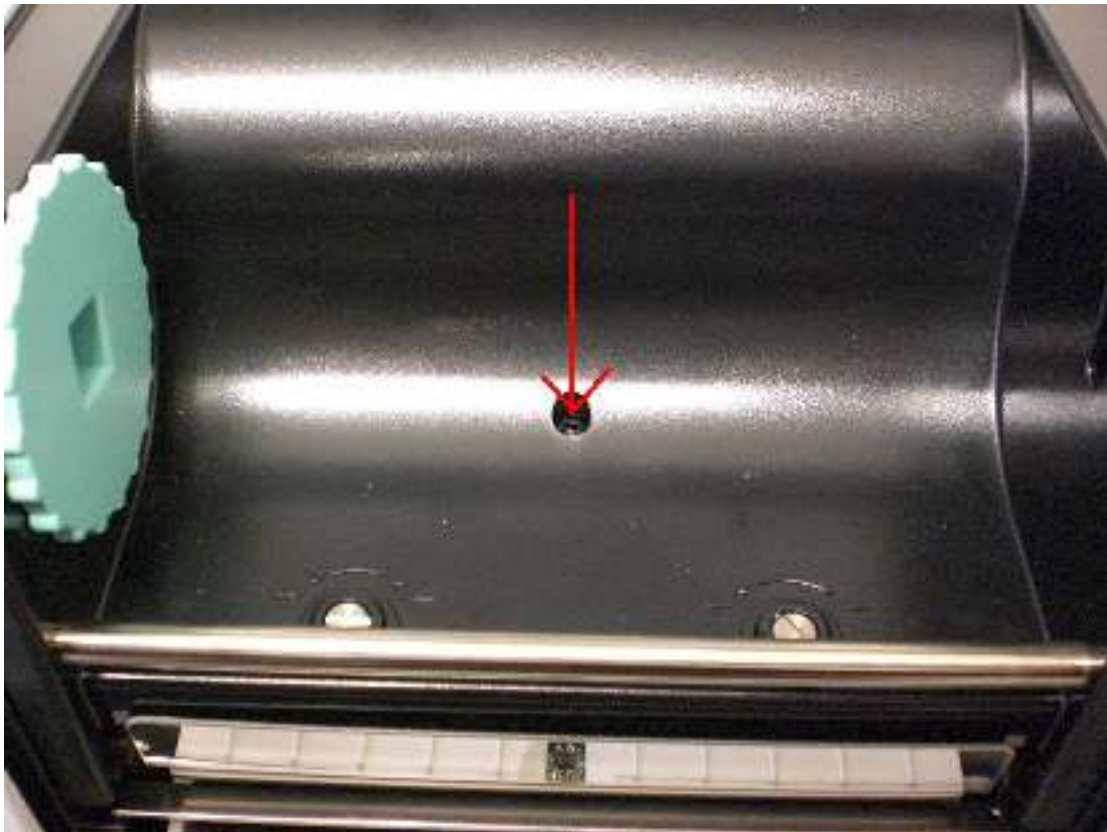

STEP 4: Separate the head from the module.

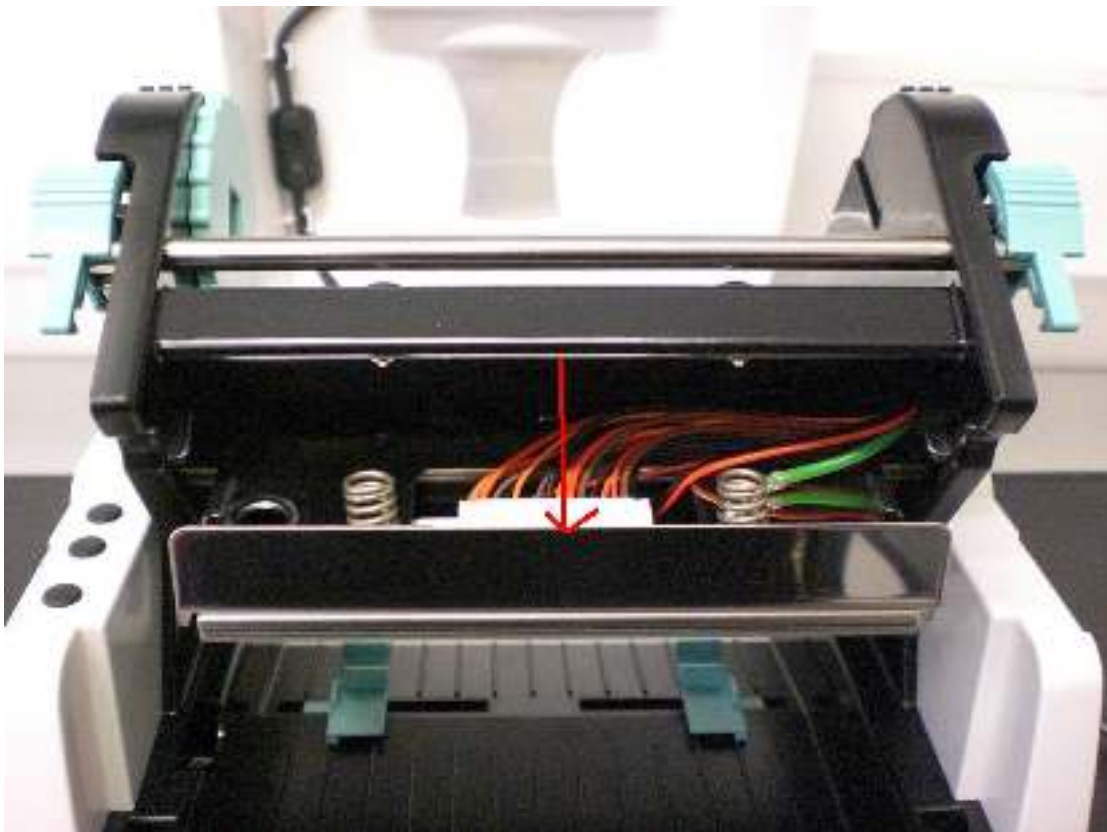

STEP 5: Separate the ribbon straightener from the head using the tabs.



STEP 6: Disconnect the head cable:



STEP 7: Remove the screws that hold the head.



STEP 8: We already have the head out of the printer.

