

# Technical Accessory Guides (TAGs)

For Associates, Resellers, ISVs and Alliance Partners

Global



Version: Active-Only

Will only show products that are known to be available for sale

Need to provide an update or change?

Contact <mailto:pgw786@zebra.com>



For Internal Use by  
**PartnerConnect Members Only**



## SP72 Technical Accessory Guide





NOTE: This document is only for general reference. Solutions Pathway and related PMBs should be used for product availability, pricing, and final solution selection.

\* Zebra does not endorse or specifically recommend any **third-party products, accessories, or hardware**. ZEBRA DISCLAIMS ANY AND ALL LIABILITY, INCLUDING ANY EXPRESS OR IMPLIED WARRANTIES, WHETHER ORAL OR WRITTEN, FOR SUCH THIRD PARTY PRODUCTS, ACCESSORIES, OR HARDWARE. THE CUSTOMER ACKNOWLEDGES THAT NO REPRESENTATION HAS BEEN MADE BY ZEBRA AS TO THE FITNESS OF THE THIRD-PARTY PRODUCTS, ACCESSORIES, OR HARDWARE FOR THE CUSTOMER'S INTENDED PURPOSE.

### Communication Cables

#### Standard USB Cables




Part Number	Picture	Description	Notes	Required Items
CBA-U21-S07ZBR		Shielded USB Cable: Series A Connector, 7ft. Straight	<ul style="list-style-type: none"> <li>► USB host will power SP72.</li> <li>► If powering an auxiliary scanner, SP72 will require a higher current host USB port (BC 1.2 compatible) to use this cable.</li> </ul>	
CBA-U46-S07ZAR		Shielded USB Cable: Series A Connector, 7ft. Straight	<ul style="list-style-type: none"> <li>► USB host will power SP72.</li> <li>► If powering an auxiliary scanner, SP72 will require a higher current host USB port (BC 1.2 compatible) to use this cable.</li> </ul>	
CBA-U42-S07PAR		Shielded USB Cable: Series A Connector, 7ft. Straight - Powered	<ul style="list-style-type: none"> <li>► USB host will power SP72 or can be powered from external power supply.</li> <li>► Use cable and external power supply when connecting an auxiliary scanner via SP72's USB host port.</li> <li>► This cable is typically not used with the SP72 since it already provides a built-in barrel jack connector for the 12V power supply.</li> </ul>	For external power supply use: <ul style="list-style-type: none"> <li>► 12V external Power Supply (PWR-BGA12V50W0WW)</li> <li>► DC Line Cord (CBL-DC-376A1-01)</li> <li>► AC Line Cord (23844-00-00R or country specific version)</li> </ul>
CBA-U32-C09ZAR		Shielded USB Cable: (Series A Connector, 9ft. Coiled)	<ul style="list-style-type: none"> <li>► USB host will power SP72.</li> <li>► If powering an auxiliary scanner, SP72 will require a higher current host USB port (BC 1.2 compatible) to use this cable.</li> </ul>	
CBA-U30-S15ZBR		Shielded USB Cable: Series A Connector, 15ft. Straight	<ul style="list-style-type: none"> <li>► USB host will power SP72.</li> <li>► If powering an auxiliary scanner, SP72 will require a higher current host USB port (BC 1.2 compatible) to use this cable.</li> <li>► Has heavier gauge wire vs. CBA-U30-S15ZAR, can support 5V and 12V power, scanner dependent</li> </ul>	
CBA-U47-S15ZAR		Shielded USB Cable: Series A Connector, 15ft. Straight	<ul style="list-style-type: none"> <li>► USB host will power SP72.</li> <li>► If powering an auxiliary scanner, SP72 will require a higher current host USB port (BC 1.2 compatible) to use this cable.</li> </ul>	
CBA-U44-S15PAR		Shielded USB Cable: Series A Connector, 15ft. Straight - Powered	<ul style="list-style-type: none"> <li>► USB host will power SP72 or can be powered from external power supply.</li> <li>► Use cable and external power supply when connecting an auxiliary scanner via SP72's USB host port.</li> <li>► This cable is typically not used with the SP72 since it already provides a built-in barrel jack connector for the 12V power supply.</li> </ul>	For external power supply use: <ul style="list-style-type: none"> <li>► 12V external Power Supply (PWR-BGA12V50W0WW)</li> <li>► DC Line Cord (CBL-DC-376A1-01)</li> <li>► AC Line Cord (23844-00-00R or country specific version)</li> </ul>






CBA-U29-C15ZBR		USB Cable: Series A Connector, 15ft. Coiled	<ul style="list-style-type: none"> <li>► Has heavier gauge wire vs. CBA-U29-C15ZAR, can support 5V and 12V power, scanner dependent.</li> <li>► USB host will power SP72.</li> <li>► If powering an auxiliary scanner, SP72 will require a higher current host USB port (BC 1.2 compatible) to use this cable.</li> </ul>	
CBA-U65-S07ZAR		USB Cable: USB-C Connector, 7ft. Straight	<ul style="list-style-type: none"> <li>► Cable is typically used with tablets and laptops with USB-C ports</li> </ul>	

#### IBM POS USB Cables




Part Number	Picture	Description	Notes	Required Items
CBA-U23-S07ZBR		USB Cable: Power Plus Connector, 7ft. Straight, 12V	<ul style="list-style-type: none"> <li>► has heavier gauge wire vs. CBA-U23-S07ZAR, can support 5V or 12V power, scanner dependent</li> </ul>	
CBA-U43-S07ZAR		USB Cable: Power Plus Connector, 7ft. Straight	<ul style="list-style-type: none"> <li>► This cable is typically used with 36XX series scanners but can also be used with SP72. CBA-U23-S07ZBR is typically used instead of this cable.</li> <li>► Can support 5V or 12V power, scanner dependent.</li> </ul>	
CBA-U34-C09ZAR		USB Cable: Power Plus Connector, 9ft. Coiled		
CBA-U35-S15ZBR		USB Cable: Power Plus Connector, 15ft. Straight	<ul style="list-style-type: none"> <li>► Has heavier gauge wire vs. CBA-U35-S15ZAR, can support 5V or 12V power, scanner dependent</li> </ul>	
CBA-U45-S15ZAR		USB Cable: Power Plus Connector, 15ft. Straight	<ul style="list-style-type: none"> <li>► This cable is typically used with 36XX series scanners but can also be used with SP72. CBA-U35-S15ZBR is typically used instead of this cable.</li> <li>► Can support 5V or 12V power, scanner dependent.</li> </ul>	
CBA-U28-C15ZBR		USB Cable: Power Plus Connector, 15ft. Coiled	<ul style="list-style-type: none"> <li>► Has heavier gauge wire vs. CBA-U28-C15ZAR, can support 5V and 12V power, scanner dependent.</li> </ul>	

#### RS232 Cables



Part Number	Picture	Description	Notes	Required Items
CBA-R01-S07PBR		RS232 Cable:STD-DB9 Female, TxD on 2, 7ft. Straight	<ul style="list-style-type: none"> <li>► Includes improved TTL current limit protection circuitry vs. CBA-R01-S07PAR</li> </ul>	Requires 5V external Power Supply (PWR-WUA5V4W0US or equivalent country specific model)
CBA-R07-S07PAR		RS232 Cable:STD-DB9 Female, TxD on 2, 7ft. Straight	<ul style="list-style-type: none"> <li>► This cable is typically not used with the SP72 since it already provides a built-in barrel jack connector for the 12V power supply.</li> </ul>	Requires: <ul style="list-style-type: none"> <li>► 12V external Power Supply (PWR-BGA12V50W0WW)</li> <li>► DC Line Cord (CBL-DC-376A1-01)</li> <li>► AC Line Cord (23844-00-00R or country specific version)</li> </ul>
CBA-R02-C09PAR		RS232 Cable:STD-DB9 Female, TxD on 2, 9ft. Coiled		Requires 5V external Power Supply (PWR-WUA5V4W0US or equivalent country specific model)

CBA-R03-C12PAR		RS232 Cable:STD-DB9 Female, TxD on 2, 12ft. Coiled		Requires 5V external Power Supply (PWR-WUA5V4W0US or equivalent country specific model)
CBA-R21-S15PAR		RS232 Cable:STD-DB9 Female, TxD on 2, 15ft. Straight	► This cable is typically not used with the SP72 since it already provides a built-in barrel jack connector for the 12V power supply.	Requires: ► 12V external Power Supply (PWR-BGA12V50W0WW) ► DC Line Cord (CBL-DC-376A1-01) ► AC Line Cord (23844-00-00R or country specific version)
CBA-R06-C20PBR		RS232 Cable:STD-DB9 Female, TxD on 2, 20ft. Coiled	► Includes improved TTL current limit protection circuitry vs. CBA-R06-C20PAR	Requires 5V external Power Supply (PWR-WUA5V4W0US or equivalent country specific model)
CBA-R46-C09ZBR		RS232 Cable: True Cvtr, DB9 Female, Pwr Pin 9, TxD on 2, 9ft. Coiled	► Cable provides ±5V signaling (RS232C) needed by some older PLC's which may not support TTL signalling	
CBA-R37-C09ZBR		RS232 Cable: STD-DB9 Female, PWR Pin 9, 9ft coiled	► Includes improved TTL current limit protection vs. CBA-R37-C09ZAR.	
CBA-R73-C09ZAR		RS232 Cable: True Cvtr, DB9 Male, Pwr Pin 9, TxD on 2, 9ft. Coiled	► Cable provides ±5V signaling (RS232C) needed by some older PLC's which may not support TTL signalling	

**Siemens Nixdorf Beetle POS Terminal RS232 Cables**

Part Number	Picture	Description	Notes	Required Items
CBA-R08-S07ZBR		RS232 Cable: Nixdorf Beetle-5V Direct Power Cable 7ft. Straight	► Includes improved TTL current limit protection circuitry vs. CBA-R08-S07ZAR	
CBA-R09-C09ZAR		RS232 Cable: Nixdorf Beetle-5V Direct Power Cable 9ft. Coiled		
CBA-R10-S07ZBR		RS232 Cable: Nixdorf Beetle-12V Direct Power, 7ft. Straight	► Includes improved TTL current limit protection circuitry vs. CBA-R10-S07ZAR	


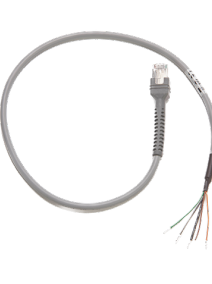
**Other POS Terminal RS232 Cables**



Part Number	Picture	Description	Notes	Required Items
CBA-R31-C09ZAR		CBL:RS232 (NCR7448) 9FT,CLD		
CBA-R47-C09ZAR		CBL:RS232 (NCR AUX PORT) 9FT, CLD		

25-32465-26		RS232 Cable: Datalogic Magellan scanner Auxiliary Port, 6ft Coiled	► RJ50 cable connects to Datalogic Magellan Slot Scanner Auxiliary Port	
CBA-R28-C09ZAR		RS232 Cable: Verifone Ruby, 9ft, Coiled		
<b>Keyboard Wedge Cables</b>				
<b>Part Number</b>	<b>Picture</b>	<b>Description</b>	<b>Notes</b>	<b>Required Items</b>
CBA-K63-S07PAR		Keyboard Wedge Cable: PS/2, Power Port, 7ft. Straight - Powered	<ul style="list-style-type: none"> <li>► Host will power SP72 or can be powered from external power supply.</li> <li>► Use cable and external power supply when connecting an auxiliary scanner via SP72's USB host port.</li> <li>► Supports host auto-detect so configuration barcode is not needed to put device into Keyboard Wedge mode.</li> </ul>	For external power supply use: ► 12V external Power Supply (PWR-BGA12V50W0WW) ► DC Line Cord (CBL-DC-376A1-01) ► AC Line Cord (23844-00-00R or country specific version)
<b>IBM 468x/469x POS Cables</b>				
<b>Part Number</b>	<b>Picture</b>	<b>Description</b>	<b>Notes</b>	<b>Required Items</b>
CBA-M61-S07ZAR		IBM 468x/9x, Port 9B Cable, 7ft. Straight	<ul style="list-style-type: none"> <li>► Port 9B connection provides 5V power.</li> <li>► Supports host auto-detect so configuration barcode is not needed to put device into IBM Host mode.</li> </ul>	
CBA-M65-S07ZAR		IBM 468x/9x, Port 9B Cable, 7ft. Straight	<ul style="list-style-type: none"> <li>► Port 9B connection provides 12V power.</li> <li>► Supports host auto-detect so configuration barcode is not needed to put device into IBM Host mode.</li> </ul>	
<b>Scanner Emulation Cables (Not supported by SP72)</b>				
<b>Wand Cables (Not supported by SP72)</b>				
<b>Synapse Adapter Cables (Not supported by SP72)</b>				
<b>Misc</b>				
<b>Part Number</b>	<b>Picture</b>	<b>Description</b>	<b>Notes</b>	<b>Required Items</b>
0652-0749-01 (3rd party) *	coming soon	Sensormatic EAS Cable	<ul style="list-style-type: none"> <li>► Allows SP72 to send good barcode scan message to Sensormatic system for EAS tag deactivation in parallel to scanning the barcode on the product</li> <li>► Cable connects to RJ45 EAS port on SP72.</li> <li>► This cable is required when using SP72 models with the Sensormatic EAS option.</li> </ul>	
<a href="https://www.sensormatic.com">https://www.sensormatic.com</a>				

BRKT-BM0072-00		Bucket Mount Bracket for SP72-H	<ul style="list-style-type: none"> <li>▶ Allows SP72-H to be installed in counters, checkstands and other horizontal installations.</li> <li>▶ Bracket labeled with P/N HN-001892-01.</li> </ul>	
BRKT-RM0072-04		Riser Mount Bracket for SP72-V (black)	<ul style="list-style-type: none"> <li>▶ Bracket can be screwed to table/counter or wall with included screws.</li> <li>▶ Table/counter installations allow SP72 to be tilted up to 15°.</li> <li>▶ Wall installations allow SP72 to be angled up to 45°.</li> <li>▶ Screw location layout is same as DS7708 and legacy Datalogic scanners to provide easy migration to SP72.</li> </ul>	
BRKT-TM0072-04		Table Mount Bracket for SP72-V (black)	<ul style="list-style-type: none"> <li>▶ Includes double-sided tape for securing bracket to table.</li> <li>▶ Bracket can also be screwed to table screws not included.</li> <li>▶ Does not provide any tilt function like the Riser Mount Bracket. Scanner will be fixed.</li> <li>▶ Screw location layout is same as DS7708 and legacy Datalogic scanners to provide easy migration to SP72.</li> </ul>	

**Replacement Items**

Part Number	Picture	Description	Notes	Required Items
CBL-CC0072		Color Camera Cable	<ul style="list-style-type: none"> <li>▶ Connects SP72-V to color camera for vision based applications.</li> <li>▶ Cable connects to USB-C Camera Port on SP72.</li> <li>▶ This cable is included on all SP72 models with the color camera option.</li> </ul>	
CBL-CE0072		Checkpoint Checkpoint EAS Cable	<ul style="list-style-type: none"> <li>▶ Allows SP72 to send good barcode scan message to Checkpoint system for EAS tag deactivation in parallel to scanning the barcode on the product</li> <li>▶ Cable connects to RJ45 EAS Port on SP72.</li> <li>▶ Requires proper integration with Checkpoint EAS system by Checkpoint personnel.</li> <li>▶ This cable is included on all SP72 models with the EAS option, however, it is not used on Sensormatic configs. Use Sensormatic 0652-0749-01 cable instead.</li> </ul>	

MISC-DG0072		Replacement Diamond-like Glass Platter for SP72-H	► Replaces the platter included on the SP72-H	
MISC-SG0072		Replacement Sapphire Glass Platter for SP72-H	► Replaces the platter included on the SP72-H	

**Power Supplies/Power Cords**

Part Number	Picture	Description	Notes	Required Items
CBL-DC-376A1-01		DC Power Cord	<ul style="list-style-type: none"> <li>► Used along with Power Supply PWR-BGA12V50W0WW.</li> <li>► Cable length is 1.8 meters</li> <li>► Uses straight through barrel jack connector.</li> </ul>	
PWR-BGA12V50W0WW		Power Supply	<ul style="list-style-type: none"> <li>► 100-240 VAC, 12V, 4.16A, 50W</li> <li>► Provides US DOE Level VI compliance for power efficiency.</li> <li>► Replaces PWRS-14000-148R</li> </ul>	<ul style="list-style-type: none"> <li>► DC Line Cord (CBL-DC-376A1-01)</li> <li>► AC Line Cord (23844-00-00R or country specific version)</li> </ul>
PWR-WUA5V4W0US		Power Supply (US)	<ul style="list-style-type: none"> <li>► Used when connecting communication cables labeled above as "Requires external power supply".</li> <li>► For use in US, CA, MX, JP, TW.</li> <li>► 5.2V, 1.1A, 5.7W</li> <li>► Provides US DOE Level VI compliance for power efficiency.</li> <li>► Replaces PWRS-14000-253R</li> </ul>	
PWR-WUA5V4W0IN		Power Supply (India)	<ul style="list-style-type: none"> <li>► Used when connecting communication cables labeled above as "Requires external power supply".</li> <li>► For use in India.</li> <li>► 5.2V, 1.1A, 5.7W</li> <li>► Provides US DOE Level VI compliance for power efficiency.</li> <li>► Replaces PWRS-14000-254R</li> </ul>	
PWR-WUA5V4W04C		Power Supply (EU, UK, Brazil, Australia, China)	<ul style="list-style-type: none"> <li>► Used when connecting communication cables labeled above as "Requires external power supply".</li> <li>► Includes AC adapter clips for use in EU, UK, Brazil, Australia and China.</li> <li>► 5.2V, 1.1A, 5.7W</li> <li>► Provides US DOE Level VI compliance for power efficiency.</li> </ul>	
23844-00-00R		AC Line Cord	► This AC Line Cord is for use in North America. See the <b>AC Line Cords by Country</b> TAG for comparable line cords to use in other countries.	